




User Guide

Media Player Solution

Spectacle Hut

Flow Chart

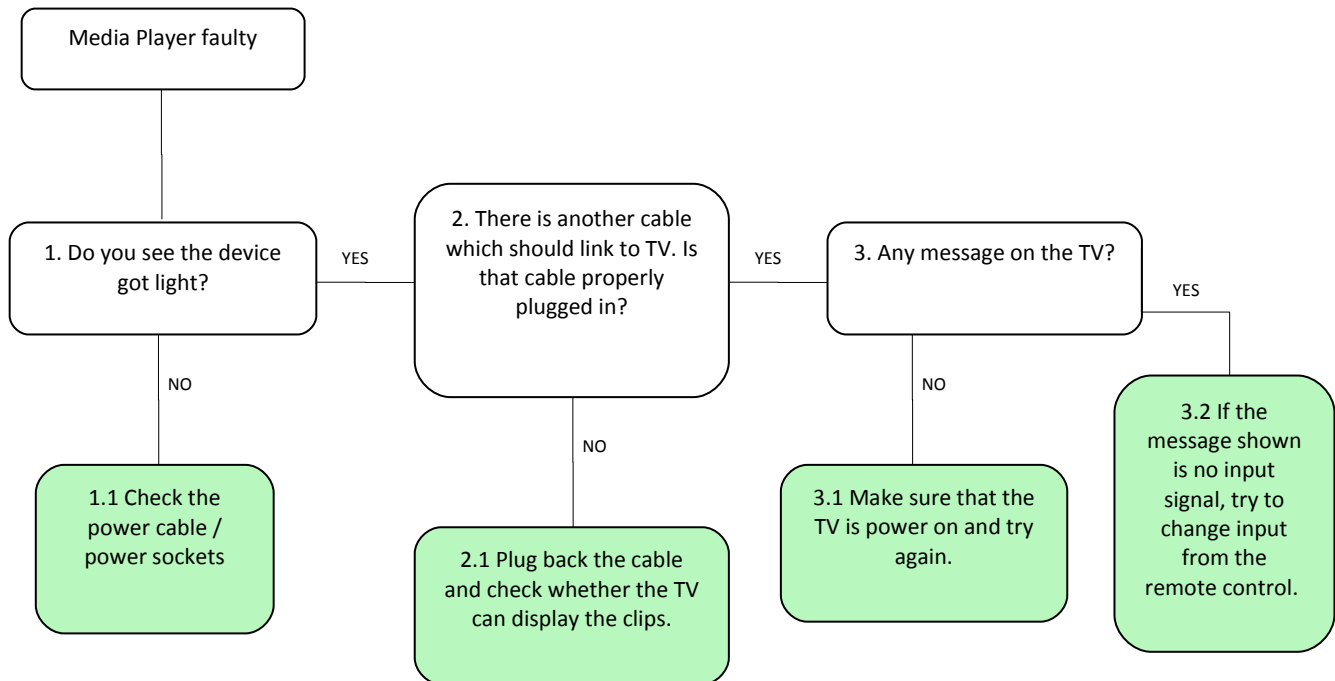

Content Page

When Media Player is not working

1. Signal light on the media player	Page 4
1.1 Check power cable or sockets	Page 4
2. Check another cable linked to the television	Page 5
2.1 Check the display clips on television	Page 5
3. Message displayed on television	Page 5
3.1 Check the Television's power	Page 6
3.2 Change input using remote control	Page 6


Solution for problems of Media Player

This section would teach you how to solve the problems that you encounter on the Media Player.

When Media Player is not working:

1. Check the signal light on the media player.

Signal light on the Media Player

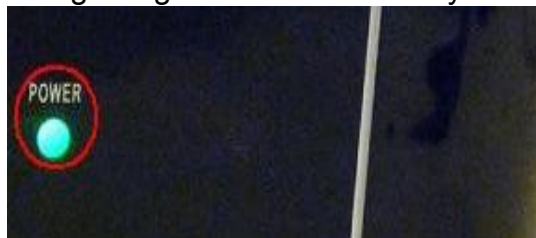

- 1.1 If there is no signal light on the media player, check the power cable or sockets to see if it is switch on / spoiled.

Check the power cable or sockets



2. If there is signal light on the media player, check the other cable which should be link to the television whether is it plugged properly.

Power cable attached to the television



Power cable attached to the media player



2.1 If the cable is not plugged in properly, plug the cable back and check if the television is able to display clips.

3. If the cable is plugged in properly, check if there is any message on the television.


Message displayed on the television



3.1 If there is no message on the television, make sure that the television's power is on and try it again.

3.2 If there is a message on the television, try to change the input from the remote control when the message is shown "no input signal".

Message displayed on television "No Input Signal"

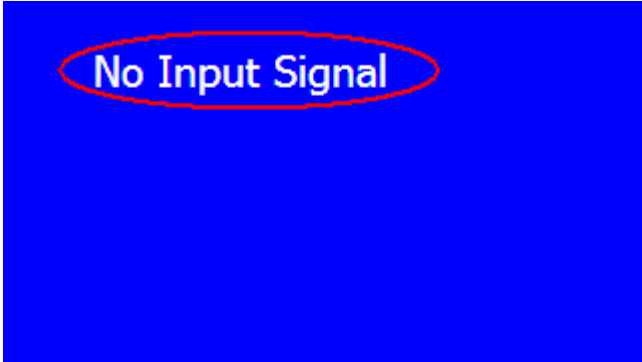

No Input Signal